



Anchor point locations

Anchor points are located under the carpet of the rear luggage area floor.

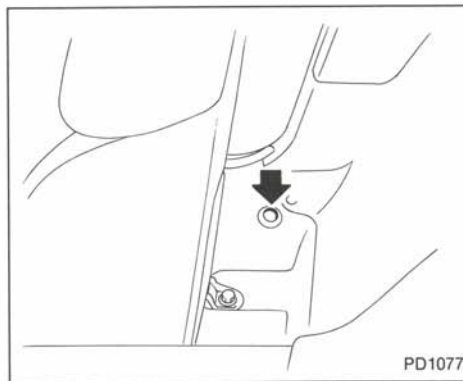

Installation on front passenger seat (For U.S.A. — Passive Belt)

- **Do not use the lap belt installed on the front passenger's seat. Use a NISSAN genuine lap belt assembly (part number 86894-30P00) for the child restraint, available from NISSAN dealers.**
- **Install the lap belt assembly properly by following the instructions attached to it as follows:**

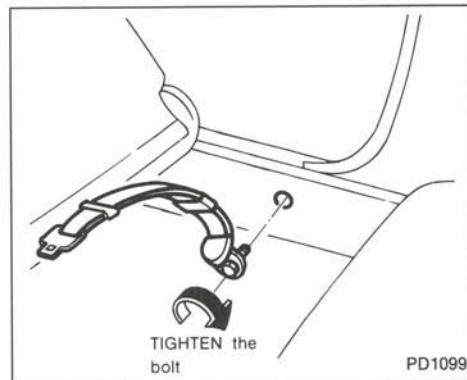


Installation of lap belt assembly

The anchor point to install the lap belt assembly is located on the center pillar beside the front passenger's seat.

1. Slide the seat to its frontmost position.
2. Peel the slit circle of the carpet, and then cut along the slit circles of the carpet with a knife.
3. Set the lap belt assembly and tighten the bolt using a torque wrench.


Lap belt assembly tightening torque:

**32 to 41 ft-lb
(43 to 55 N·m)**

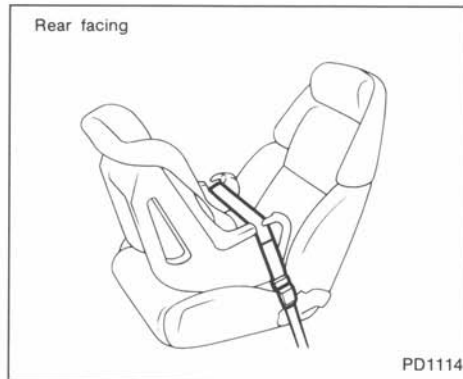

Installation of child restraint

1. Slide the seat to its rearmost position and release the passive seat belt from the buckle.
2. Secure the child restraint with the lap belt assembly and adjust the lap belt assembly as illustrated. Make sure the lap belt tongue is connected to the buckle.
3. Slide the seat forward so that the lap belt fully tightens the child restraint.

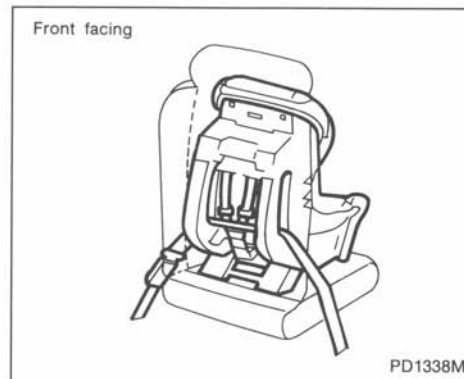

Never install the child restraint using an automatic seat belt with a retractor because it is not suitable for this purpose.

For normal use, the passive seat belt should always be connected to the buckle.

CAUTION:

This buckle assembly is for use with a child restraint only.

Do not attempt to use it with the adult lap belt.